

Calculator Service

CAUTION

Calculator can be damaged by *strong static charge*.

Blank Display

If the display blanks out, turn the HP-65 OFF, set the W/PRGM-RUN switch to RUN, and turn the HP-65 back ON. If 0.00 does not appear on the display, check the following:

1. Check the battery pack to see if it is discharged and whether it is making proper contact with the calculator.
2. If the display is still blank, try operating the HP-65 from the ac line.
3. With the battery charger connected to the HP-65, make sure the charger is plugged into a live ac outlet.
4. If the display is still blank, the HP-65 is defective. (*Refer to the warranty information that follows.*)

Low Power

All decimal points light to warn you that you have 2 to 5 minutes of operating time left on battery power. You *must* either:

1. Operate from ac power.
2. Charge the battery pack.
3. Insert a fully charged battery pack.

Improper Card Reader/Writer Operation

If your calculator appears to be operating properly except for the reading or writing of program cards, check the following:

1. Make sure that the W/PRGM-RUN switch is in the correct position for desired operation: RUN position for reading cards, W/PRGM for recording cards.
2. If the drive motor does not start when a card is inserted, make sure the battery pack is making proper contact and has ample charge. Remember that the battery charger alone does not deliver enough current to operate the drive motor.